



BONDTECH

Level sensor offsets for DDX (mm)

Levelling Sensor	Hotend			
	Stock Ender/CR-10	Stock CR-10(S) Pro/Max	Mosquito	PH2/PH3 Copperhead
BL-touch	X=-27,625 ; Y=-1,9	X=-27,625 ; Y=-0,1	X=-27,625 ; Y=0	X=-27,625 ; Y=0
EZABL 18	X=-30,625 ; Y=-1,4	X=-30,625 ; Y=0,6	X=-30,625 ; Y=0,5	X=-30,625 ; Y=0,5
EZABL 12	X=-27,66 ; Y=-1,4	X=-27,625 ; Y=0,6	X=-27,625 ; Y=0,5	X=-27,625 ; Y=0,5

Note : offsets are being supplied following these guidelines:

When facing the printer the tip of the levelling sensor is displaced from the tip of the nozzle.

Displacements to the left are negative, and displacements to the front (anterior) are negative.

Displacements to the right are positive, and displacements to the back (posterior) are positive.